 




Standing Desk Controller

 
instruction Manual

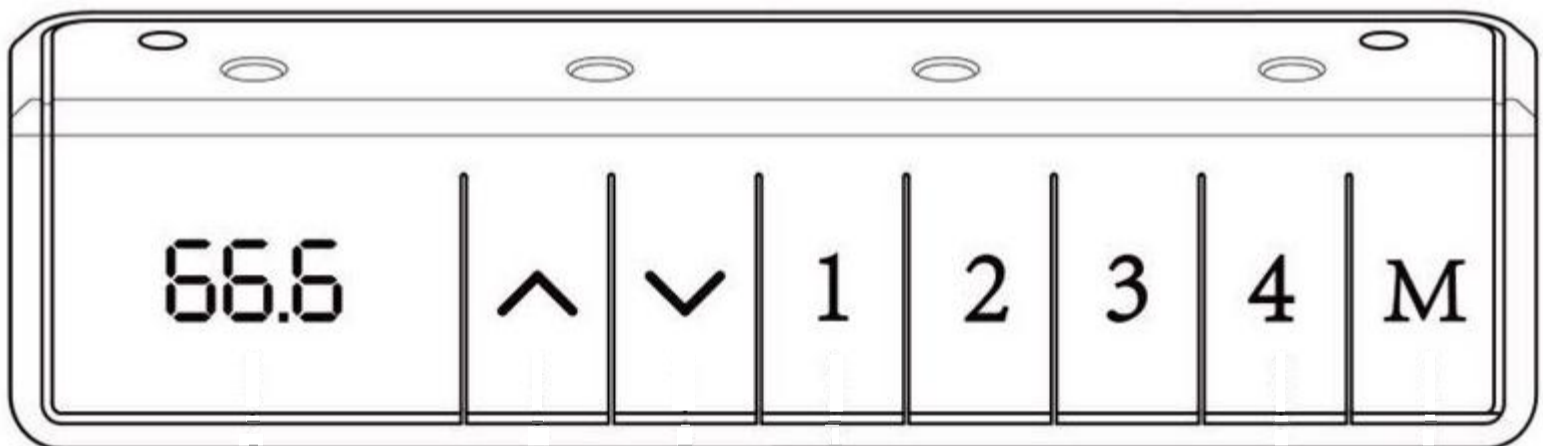

General Features

- Max. available buttons: 7
- Color: Case: Black
- 3-digit display shows the height of the desk
- 4 Memory positions
- Classic control for height-adjustable desks
- Mounted to the desk front side


For technical support, Email to tech1@venace.com

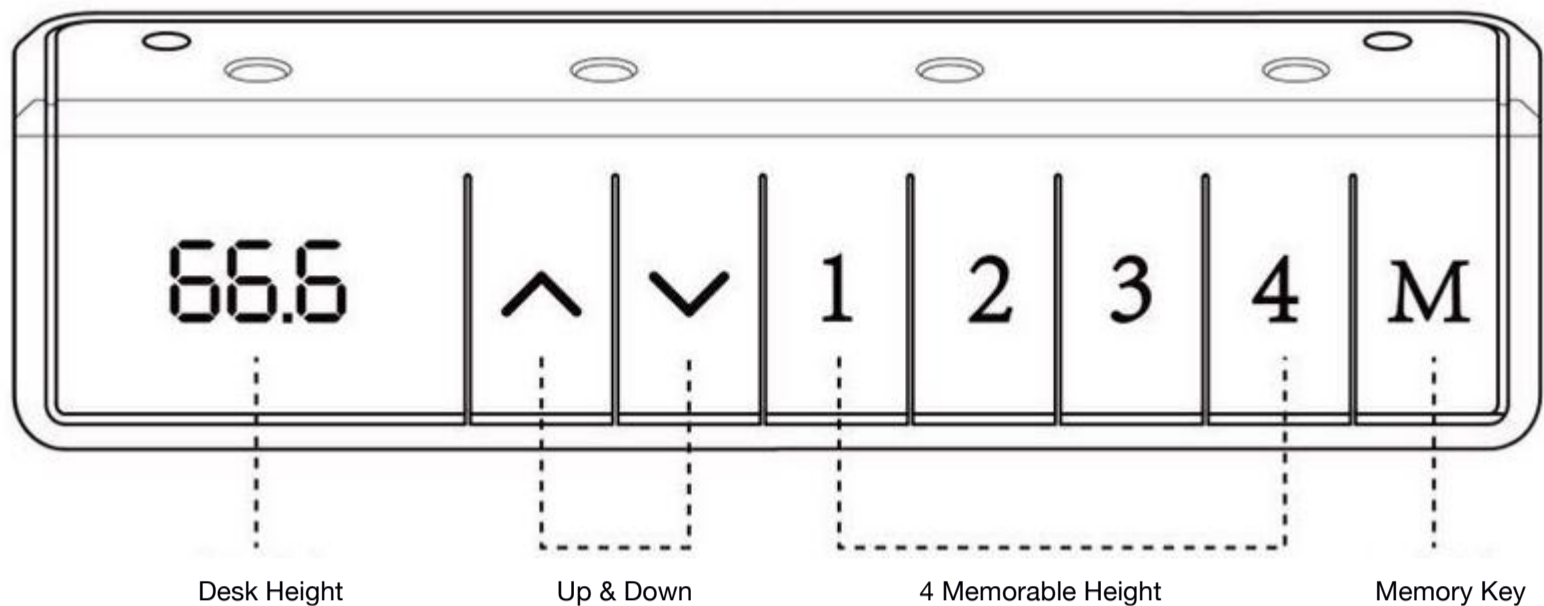

Notice:


Please make sure that the table is not obstructed during the lifting process, the table is not close to the wall, and the length of the cable is sufficient to move the table up and down.

 Function Introduction:

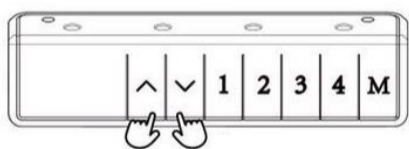


Reset

 Press 'Up' & 'Down' until heard a 'Di' sound.
The minimum height is displayed on the screen then the reset finish

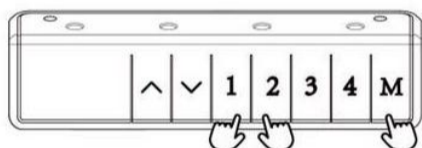


Metric conversion

 Press '1' '2' and 'M' for 5s, until 'C-E' displayed on the screen.
If keep press '1' shows 'C' on screen, then it is Metric.
If keep press '2' shows 'E' on screen, then it is Imperial.

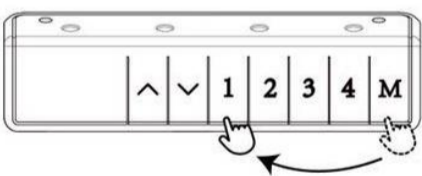

Memory position setting

 Press m, the height shown on the screen flashes, then press '1' , the screen displays 'P1' , indicating that the height memory of position '1' is completed.
Other memory key operations are similar.
Memory can be repeated. And in case of power failure, the memory height will not be lost.

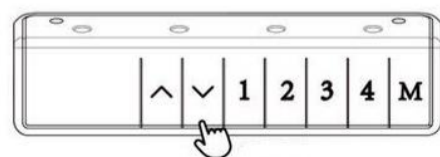

Minimum height modification

First, lower the desktop to the lowest height and release the keys.
Press 'Down' again until the screen flashes, release.
Then every time you press the 'Down' key, the minimum height is lowered by 1cm or 0.4 inch.
and every time you press the 'Up' key, the minimum height rises by 1 cm or 0.4 inch.

Common problems and solutions:

If the following problems occur with your table, please try resetting:

- Working abnormally
- Handset screen shows "000" or "E00"

For more products, please visit <https://www.venace.com/product-category/height-adjustable-desk/>